

Thermo Downlight



Regulations

To ensure correct functionality and safety please read instructions carefully before using this product. This luminaire complies with AS/NZS 60598.2.1, AS/NZS 60598.2.2A. All wiring and installation of this luminaire must adhere to local and national wiring rules e.g. AS/NZS 3000:2007 Amendment 2:2012 Electrical Installation.

Tips

1. Always ensure power is off and the fitting has cooled down before performing any maintenance or adjustment to the fitting
2. To avoid injury or damage to the fitting, ensure that power leads and screws are secure before connecting the power
3. Handle the fitting with care to avoid breakage
4. Find a suitable location away from liquids or hazards
5. To clean, wipe with a damp clean cloth. Never soak the fitting with water.

 
Note: Please check fitting label to see if fitting is dimmable and if so which type of dimming.

Warning


1. Switch off power before installation
2. Switch on only after complete installation and examination of the circuit
3. Only a qualified electrician can install and maintain this fitting
4. Product modification and/or improper installation will void warranty.

Installation


A. Make a cut out in accordance with cut out size in schedule.

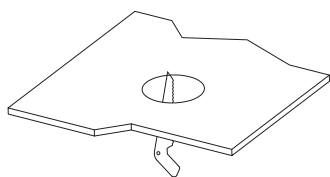

 
B. Use screw driver to open driver terminal cover on the back of the downlight, connect to power then fix the cover back.

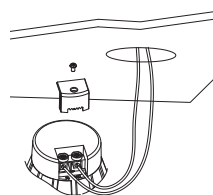

 C. Hold back spring clips then push the downlight into the hole.

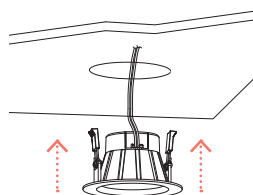

 D. Make sure the downlight is fixed tightly in the ceiling, turn on the power.

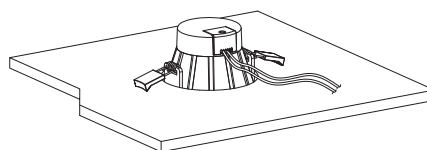

Model	Dimensions LxWxH mm	Cutout D mm	Power (W)	CCT (K)	IP	Voltage (AC)	Control
G7TD	85 x 65	70-75	7	3000, 4000, 5000	40	220-240V 50,60Hz	Triac
G10TD	105 x 72	90-95	10	3000, 4000, 5000	40	220-240V 50,60Hz	Triac