
fluxxLED

Cove Wall Light Installation Manual

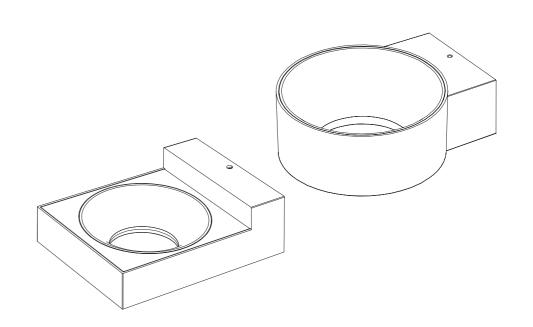

fluxxLED

Important Safety Instructions:

- 1. Turn off power before installation or before doing any maintenance work.
- 2. Do not install any luminaire near a heat source.
- 3. For Outdoor and Indoor use.
- 4. Do not exceed the nominal supply voltage or amperage ratings.
- 5. All wiring and installation of this luminaire must adhere to local and national wiring rules eg AS/NZS 3000:2007 Amendment 2:2012 Electrical Installation
- 6. Take care not to pull any electrical wires during unpacking as this may damage the connection.
- 7. Lay out all the components on a smooth surface and make sure there are no components missing before assembling.
- 8. To avoid injury or damage to the fitting, please ensure that power leads and screws are secure before connecting the power.
- 9. Please keep instructions for future reference.

Installation Procedure

WARNING M


- 1.Switch off before installation.
- 2.Switch on only after complete installation and examination of the circuit.
- 3. Professional electrician for installation and maintenance only.






Turn Off power supply before starting any installation. Read instructions & check you have all the tools & accessories to complete the installation correctly.


Installation (1)

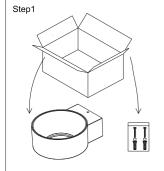


Take out wall light and accessory pack from package.

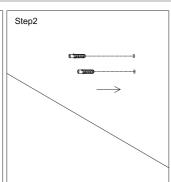

Fix the plastic anchor into wall.

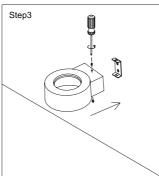

Loose screws and take out the bracket from lamp body.

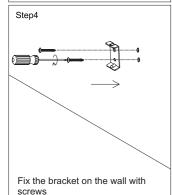

Step5

L = BROWN


N = BLUE

• YELLOW-GREEN

Open junction box, connect "L","N", "G" wires to terminal block respectively and lock the driver box, then fix the light on the wall.



Installation (2)

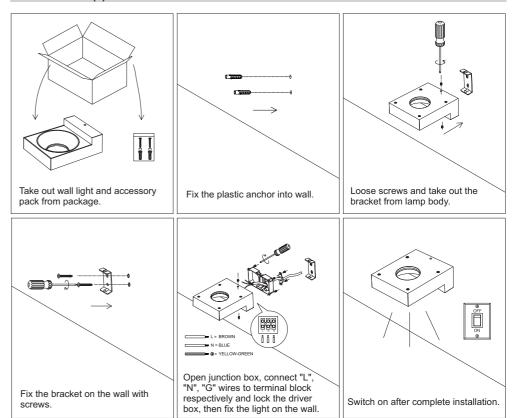

Warning: Production modification and improper installation are not valid for warranty.

Base plate, cable entry gland and screw heads must be covered in silicon sealant. Failure to do so will cause luminaire failure from water ingress